



Deckchair

Classic



Gently lift the printed fabric until you can see the lower edge where the Velcro strip is attached to the wooden bar.



Carefully peel off the Velcro strip until the fabric is completely detached from the wooden frame.



Fold the top part of the fabric backward over the upper wooden bar until the Velcro is visible.



Gently detach it from the frame. Start with the upper wooden bar.



When attaching the new fabric, ensure that the printed side faces outward and the print is correctly aligned.



Align the Velcro strip of the cover with the center of the Velcro on the frame and press it firmly.



Then fold the fabric back over the bar to cover the Velcro strip and press it down firmly with your hands.



Drape the fabric over the bottom wooden bar and fold it once around the bar.



Align the Velcro strips just as you did at the top and press them together securely.



Deckchair

Classic

TIPS

1. The deckchair should only be used on solid ground
2. If the fabric is attached without wrapping it around the wooden bars, it may loosen under weight!
3. Do not leave the chair out in bad weather
4. Store in a dry place

MAINTENANCE INSTRUCTIONS

The deckchair material can be washed at 30° C and is not suitable for the dryer. The wooden frame can be cleaned with a damp cloth or sponge. Discolouration of the wood despite a protective varnish is not a reason for a complaint. The same can be said for incorrect usage or storage.